

Quick Start Guide

LUNAR Eclipse L1

For more information on our return and warranty policies, please visit www.lunar-usa.com/support, you can also reach out to **Lunar Customer Support** at support@lunar-usa.com.

Scan with your Camera app for more guides :



Know Your Phone

 


Function Key

Keys	Functions
Power Key	• Press to turn on/off the screen. • Press and hold to power off or restart the phone.
Volume Key	• Press to adjust the volume of device.
Multitask Key	• Tap to open the list of recently used apps. • Click to open the app quickly. • Slide to remove it from the list.
Home Key	• Tap to return to the home screen from any app or screen.
Back Key	• Tap to return to the previous screen.


Insert SIM card / Micro SD cards

- Insert the SIM tool to the pin hole on the SIM card tray. Keep pushing until the SIM card tray pops out.
- Place SIM card and optional Micro SD card into the card tray. The SIM card and SD card are located on each side of the tray, labeled “**SIM**” and “**Micro SD**” accordingly.
- Push the tray back into the phone.

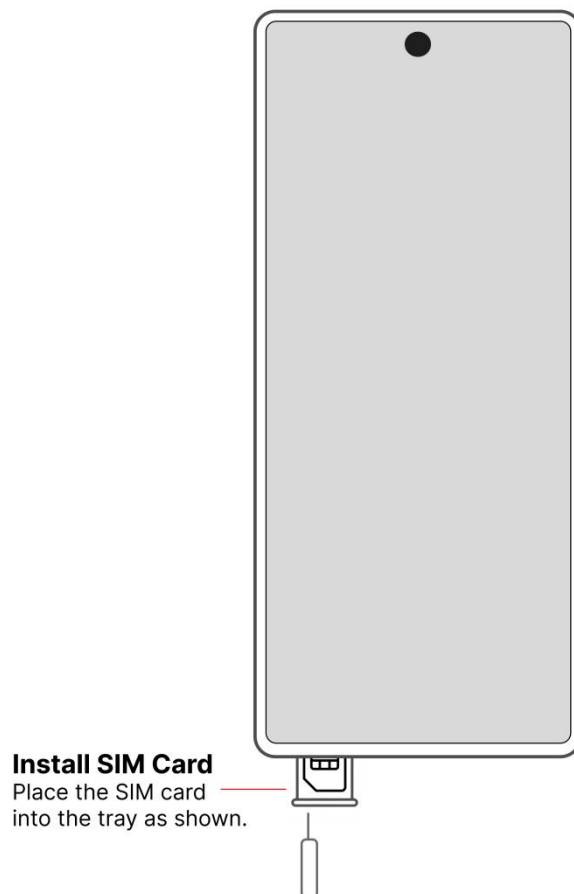

Charge the Battery

 
Charge the battery fully before using it. Connect the USB cable to the USB power adaptor, and then plug the end of the USB-C cable into the USB-C port on your device.

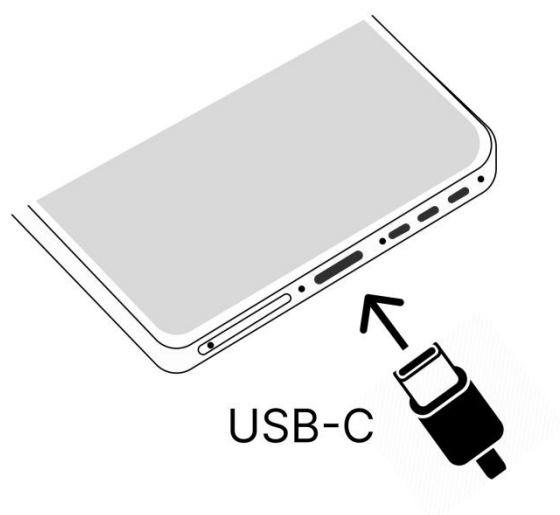

✓ Note:

A USB-C cable and charger are included in the package. To avoid injury or damage to your device, do not use incompatible, worn, or damaged batteries, chargers, or cables. Always use the provided accessories or those certified by the manufacturer to ensure safety and optimal performance. Using incompatible accessories may void your warranty.

 
Power on/off your phone

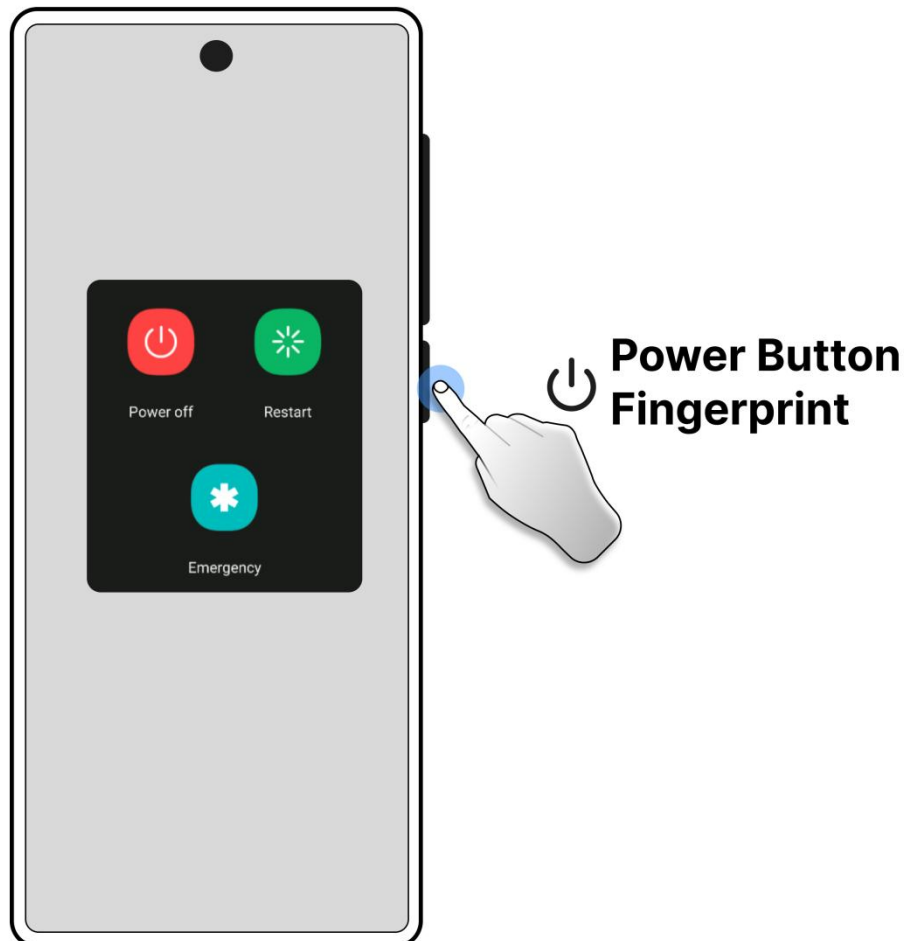

- Press and hold the **Power Button**, to turn your phone on. Then follow the setup screen to get your phone ready
- Press and hold the **Power Button** and tap  **Power off** to power off your phone.
- **Emergency Call**
 - Tap the  **Emergency**, and you can call the emergency number in your area regardless of your phone's service status. If your phone isn't activated, emergency calls are still available.
 - Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Home screen

 The Home screen is your starting point to access all the features on your phone. It displays application icons and other features. You can customize the home screen with different wallpapers and display the items you want.

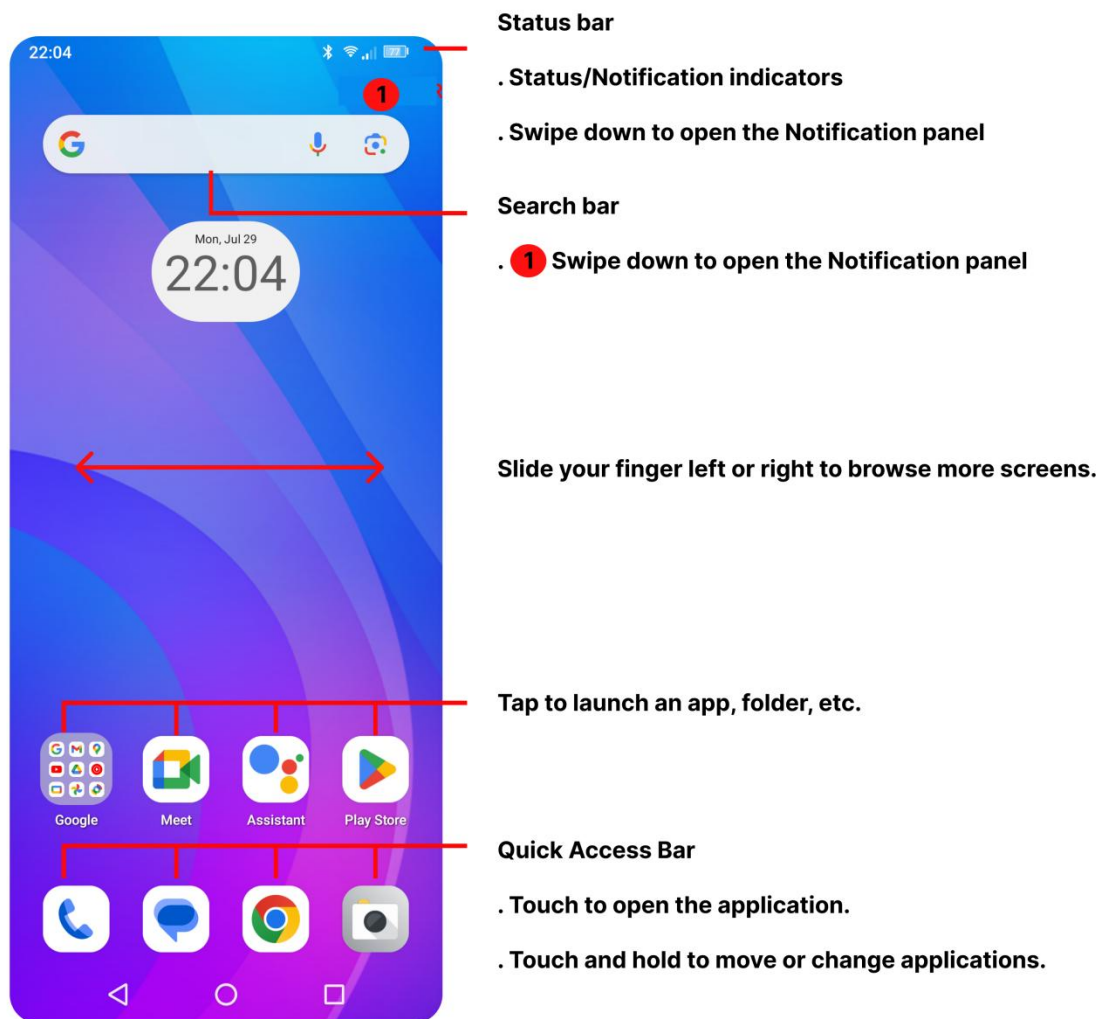

Touch screen

The way to control a mobile phone is by using your finger on touch icons, buttons, menu items, the onscreen keyboard, and other items on the touch screen.

- Tap



- Swipe or Slide



- Press & Hold



- Pinch



 
- Drag



- Rotate the Screen



Phone Call

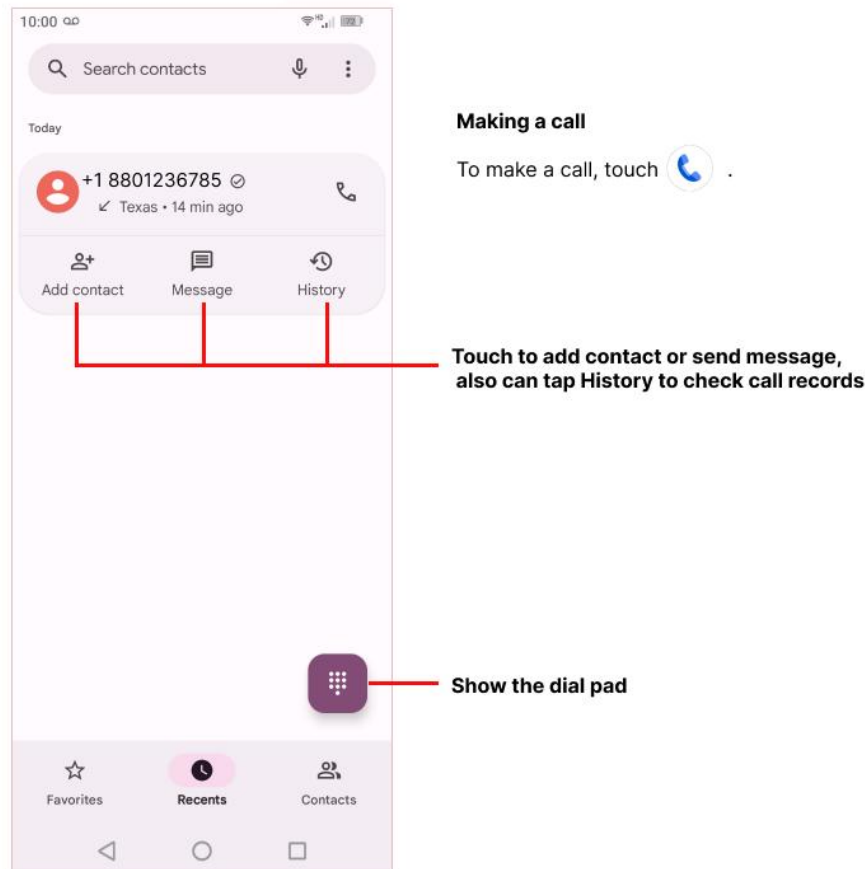

- You can make or answer a call, initiate an emergency call, and launch a multi-party call.
- On the bottom left of the home screen, tap the Dial-up  icon.
- The Dial-up page is displayed. Enter a phone number to make a call.
- When you enter the number, the phone will automatically search among all contacts for a number that best matches the entered numerals, to facilitate your operation.
- During a call, tap **More** and **Add a Call**, and current call automatically switches to Silent mode.
- Enter the number of another contact, tap Dial-up, and the previous call automatically switches to **On-hold** mode. After the second call is answered, tap More and Merge. In this way, a teleconference is established to achieve a multi-party talk.

Message

 
You can use Messages to send text messages (SMS), multimedia messages (MMS), and chat messages.

Send a Message

You can use this phone to exchange text messages and multimedia messages with another person or group of people. The messages that come to and from the same contact or phone number will be visible in a single conversation, so you can see your entire message history with a person conveniently.

Enter text


- Touch a text field, and the onscreen keyboard opens.
- Tap the keys on the keyboard to type; the characters you've entered appear in a strip above the keyboard with suggestions for the word you are typing below.
- Use the Delete key to erase characters to the left of the cursor.
- When you're finished typing, press back to close the keyboard.

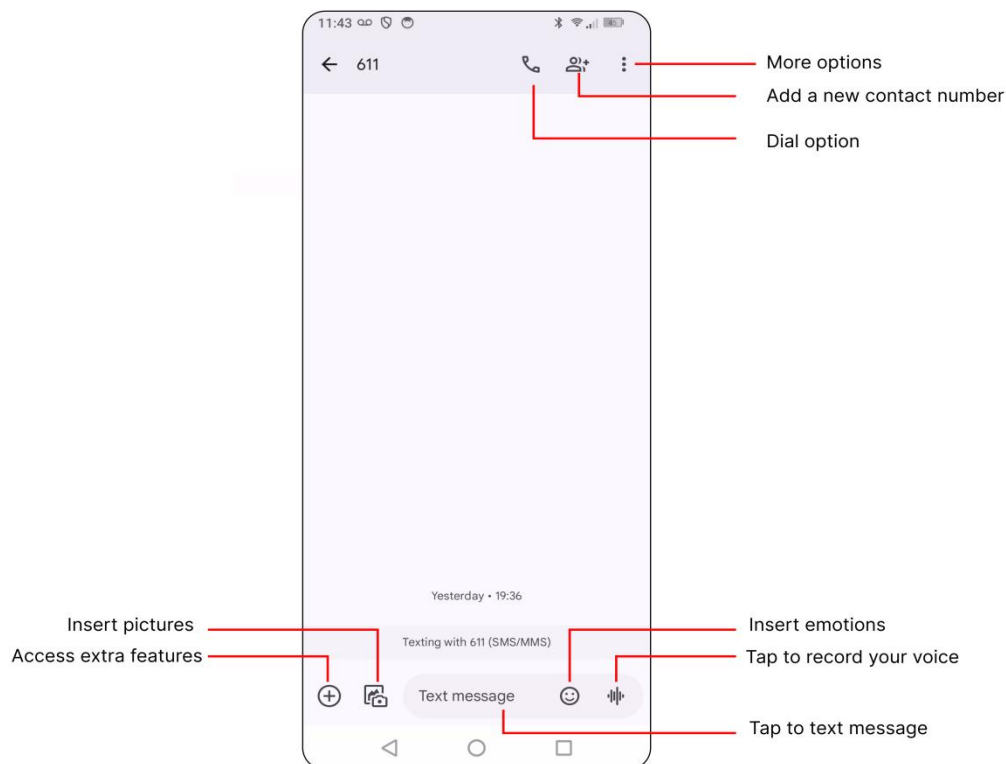

Take a picture

Accessing the camera

 From the Home screen, tap  Camera. If your device is locked, double press the **Power Button** to open the camera.

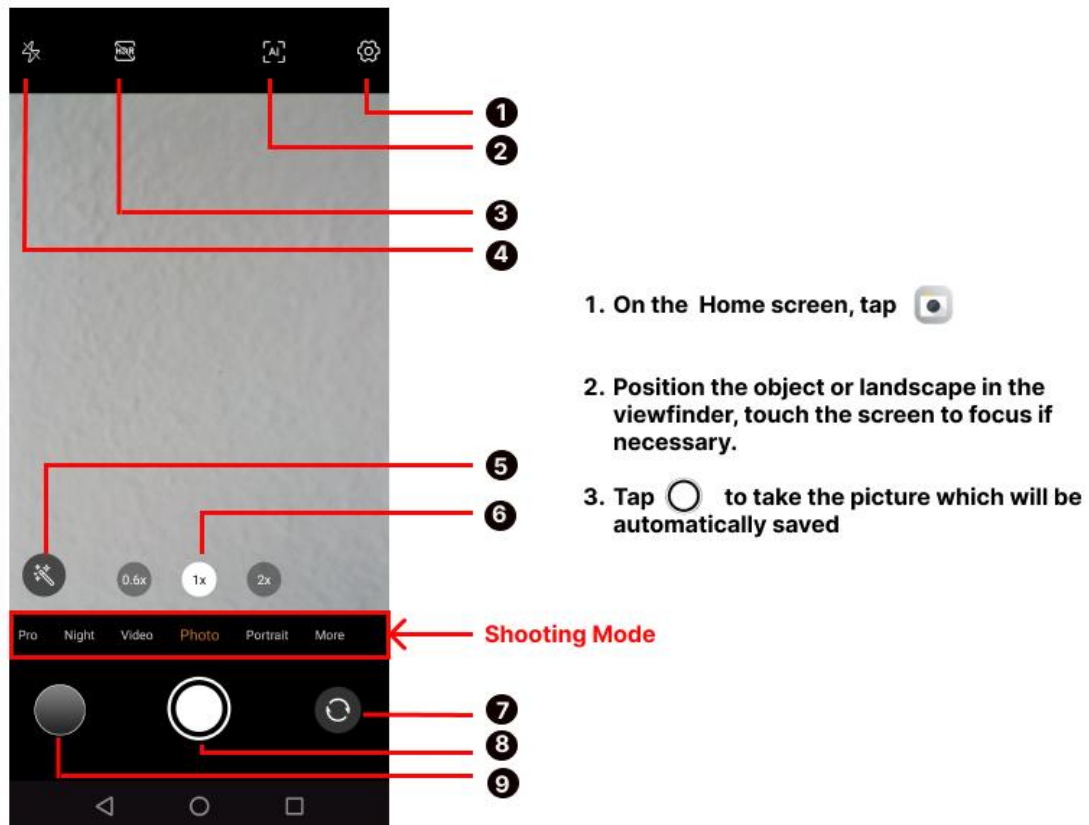

- 1 Touch to access more options
- 2 Touch to ensure that AI camera is enabled
- 3 Touch to turn HDR on/off
- 4 Touch to select flash mode or turn camera flash on/off
- 5 Touch to select a Filter or Beauty
- 6 Select 1x magnification or swipe left or right to customize the magnification level
- 7 Switch between front/back camera
- 8 Touch to take a picture
- 9 Touch to view photos or videos you have taken.